

AIRPLEX INDUSTRIES LTD

21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand PO Box 11286, Ellerslie, Auckland 1542 New Zealand PH +64 (9) 276-9826 Fax +64 (9) 276-9836 info@airplex.co.nz www.airplex.co.nz

FITTING INSTRUCTIONS FIT1013


PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION


MERCEDES SPRINTER 2018+

BG593D

MADE IN NEW ZEALAND

- **1.** Open the hood and put the Hood Protector in place ensuring that it is centrally located. Remove the Hood Protector.
- 2. Note 2 holes in the lower tabs of the Hood Protector that coincide with the 2 large holes in the underside of hood.

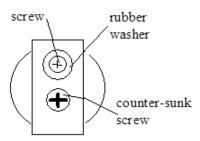

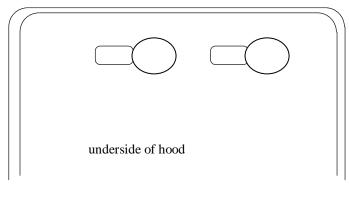

SEE BELOW FOR MORE IMAGES OF THIS CLIP

- **3.** Remove the "top" screw and washer from each pre-assembled bracket, leaving bottom screw attached to bracket pair. (ie "top" screw in diagram only to be removed).
- **4.** Position 1 pair of brackets either side of each large steel hole on underside of hood. Loosely tighten in position using the bottom screw.
- **5.** Position Hood Protector on hood and fasten under hood by inserting the removed "top" screw through the Hood Protector, also using the washer.
- **6.** When positioned correctly, firmly tighten each of the "bottom" screw.
- 7. Stick the anti-abrasive tape on edge of hood where 4 plastic fastening clip secures the Hood Protector near the fenders.
- 8. It is the drivers responsibility to regularly check that the Hood Protector never touches the hood. Replacement parts are readily available from the Distributor.

 The Hood Protector should not come into contact with the hood paintwork at any time.

Hood adjustment: After fitment of Bug Guard, it is important to check if there is sufficient room between the hood and the grille. Close hood slowly to determine if room is sufficient. If doubtful, it is advisable to adjust the hood stops to allow more room.

CLOSE THE HOOD BY DROPPING FROM 6" HEIGHT. ASSIST CLOSURE ONLY BY PRESSING ON THE HOOD.

NEVER PRESS ON THE HOOD PROTECTOR.

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge. No authorisation by or association with any automobile manufacturer is implied.



AIRPLEX INDUSTRIES LTD 21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand PO Box 11286, Ellerslie, Auckland 1542 New Zealand PH +64 (9) 276-9826 Fax +64 (9) 276-9836 info@airplex.co.nz www.airplex.co.nz







